

GR VertiQ
SOLUTION SARL



**THE FUTURE OF
VERTICAL MOBILITY**



About Us



At GR VertiQ, we redefine urban mobility. We are a premier provider of advanced elevators and escalators solutions, dedicated to keeping this rapid world moving smoothly, safely, and efficiently. From architectural marvels to residential spaces, we are engineering seamless vertical transport systems that blend cutting-edge technology with elegant design.

we have Supply, installed, and maintained high-performance elevators and escalators for commercial, residential, and industrial sectors.

Core Strengths



All kinds of passenger elevators



High-speed passenger elevators



Rapid-response service and maintenance team



Eco-friendly public transit escalators

GR **VertiQ**
SOLUTION SARL

Elevator Ride



Safe and Reliable Travel.

Automatic emergency levelling device in case of power failure

When a power off during running, the automatic emergency leveling device can run the car to the nearest level position in a timely manner, so that passengers can safely leave the elevator.

Permanent magnet synchronous gearless traction machine, Reliable and durable

The power capacity is larger, the temperature rise is better than the national standard.

It provides 2.5 times the rated load braking torque, and a higher transmission efficiency.

The brake is tested by 15 million times.

Microcomputer control system, Stable operation

The new generation of dual 32-bit control system adopts CANBUS communication, direct docking, distance control and other technologies, ensuring stable operation, safety and reliability.

Permanent magnet door machine, Rapid and steady

The torque is greater, the efficiency is higher, and the operation stability and sensitivity are better.

The curtain light can make rapid response to any person or object when entering into the detection area.

The door system (door lock+ door machine) has passed 12 million times reliability tests.

Technology of preventing car's unintended movement, Safe leveling

The precision of car leveling detection can be up to millimeter without mistake, so that the passengers easily get in and out. The reliable car leveling memory technology ensures that the elevator stops in advance and the leveling is safe.


Security Components, Full Protection

The safety gear adopts symmetrical wedge block to avoid the occurrence of the car shaking while using unilateral wedge braking, and reduce the damage to the guide rail.

Full load and full speed hydraulic buffer with longer service life.

Car positioning technology, Safe arrival

The abnormal sliding between the wire rope and the traction wheel is effectively eliminated, and the possibility of returning to the home station by accident is reduced to a minimum.

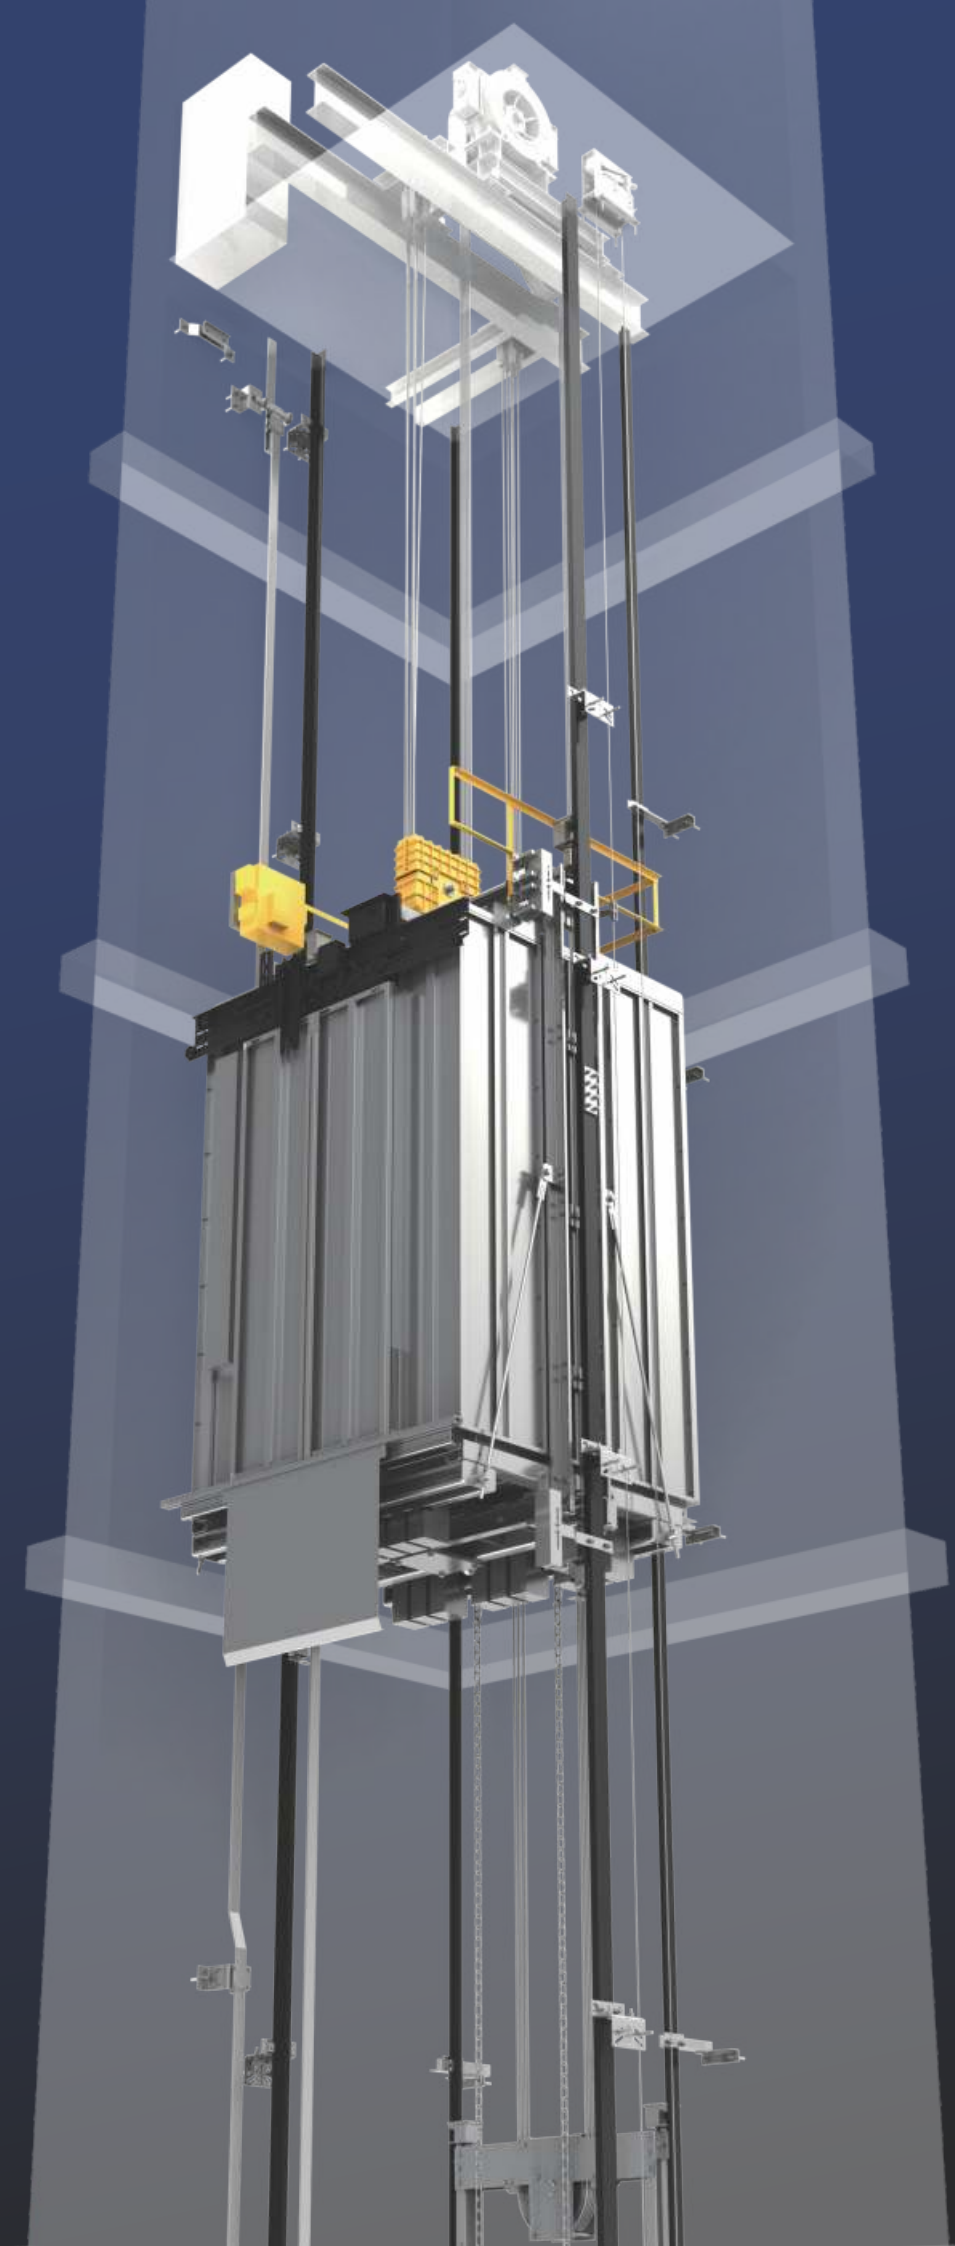



KL/Y4-001R-2

(Standard)

Car wall
Hairline stainless steel + mirror
stainless steel

Car door
Hairline stainless steel

Floor
KL/JD-Y001

Handrail
KL-FS 001

Operation panel
KL241CD Integrated operation
panel



Scan the QR code to know more about
the lift car in the 360-degree manner

Ceiling KL/DD-Y001

Hairline stainless steel, polycarbonate
sheet LED light source



KL/Y4-002R

(Optional)

Ceiling
KL-D 014 Hairline stainless steel

Car wall
Hairline stainless steel

Car door
Hairline stainless steel

Floor
KL-JD 006

Operation panel
KL231CD Integrated operation panel



Scan the QR code to know more about
the lift car in the 360-degree manner

Cabin & Landing Operation Panel

Wall-mounted Integrated Control Cabinet (Apply to front wall and side wall)



Hospital elevator applies the most concise integrative operation panel in the aspect of the model. It needs no re-installation, is of the natural model, and uses environmental protection materials, is cost-saving, sensitively reactive, and with easy maintenance.

Panel material
mirror stainless steel/Hairline

Button:
Round micro-stroke button

Display screen
Dot matrix/LED segment
code/Multimedia display screen

Parking number
2-48 parking floors

Display screen/Button standard




Red dot



KL241CD

Standard

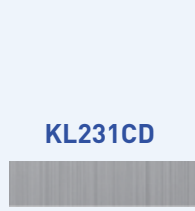

KL231CD

Free optional

Display screen/Button optional



White dot



KL241-1CD
Charged optional



KL231-1CD
Charged optional



LED section of code



KL243-4CD
Free optional



KL233-4CD
Free optional

Optional multimedia display screen/buttons (Charged optional)

Optional button



KL235CD KL237CD-A KL239CD



KL245CD KL247CD-A KL249CD

Optional screen size



KL241CD
Standard

There may be differences between the printing color and the real object color. Please refer to the real object.

Rotary Integrated Control Cabinet (Only for front wall, not side wall)



Panel material (Mirror stainless steel/Hairline stainless steel)

Panel material
Mirror stainless steel/Hairline



Button
Round micro-stroke button

Display screen
Dot matrix

Parking number
2-60 parking floors

Display screen/Button optional



Red dot matrix



KL511CD
Charged optional



White dot matrix



KL511-1CD
Charged optional

Operation panel for disabled (Charged optional)



Panel material
Hairline stainless steel



KL38ACD



KL38A-1CD

KL511CD
Charged optional

There may be differences between the printing color and the real object color. Please refer to the real object.

Calling Indicator Without Bottom Box



KL1201-3HD
Standard
Dot matrix display



KL1201-IHD
Free optional
LED segment
code display



KL1201-2HD
Free optional
Dot matrix
display



KL1213-3HD
Charged
optional
Dot matrix
display



KL1213-IHD
Charged
optional LED
segment code
display



KL1213-2HD
Charged
optional Dot
matrix display



KL1213-4HD
Charged
optional Liquid
code display

Panel material Anti-fingerprint frosted stainless steel

Floor level indicator



KL1206-3H
Optional white
dot matrix,
White segment
code



KL341H
Panel material
(hairline
stainless steel)



KL365H
Panel material
(hairline
stainless steel)

Fireman switch



KL1205H
Fire box
Standard



KL1215H
Fire box
Charged
optional

There may be differences between the printing color and the real object color. Please refer to the real object.



Landing Door

Jamb:
It matches with the hoist-way door

Hoist-way door
Hairline stainless steel
Dusting steel plate

Sill
Hard aluminum

Handrail (optional)



KL-FS 001
Stainless steel hairline
mono-tube



KL-FS 003
Stainless steel hairline
double-tube



KL-FS 005
Stainless steel hairline
tri-tube



KL-FS 009
Short grain stainless
steel, arc head

PVC floor (optional)



KL-JD 001



KL-JD 002



KL-JD 004



KL-JD 005




KL-JD 006



KL-JD 010



KL/JD-Y001

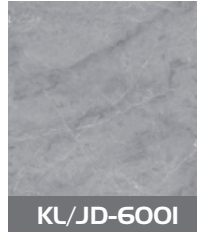


KL/JD-6001



KL/JD-4020


Dusting color standard (optional)



KL-SK 001
Ice gray




KL-SK 002
Plane gray



KL-SK 003
Corny yellow

Hospital Elevator (with Machine Room)

Standard GB/T 7588.1-2020

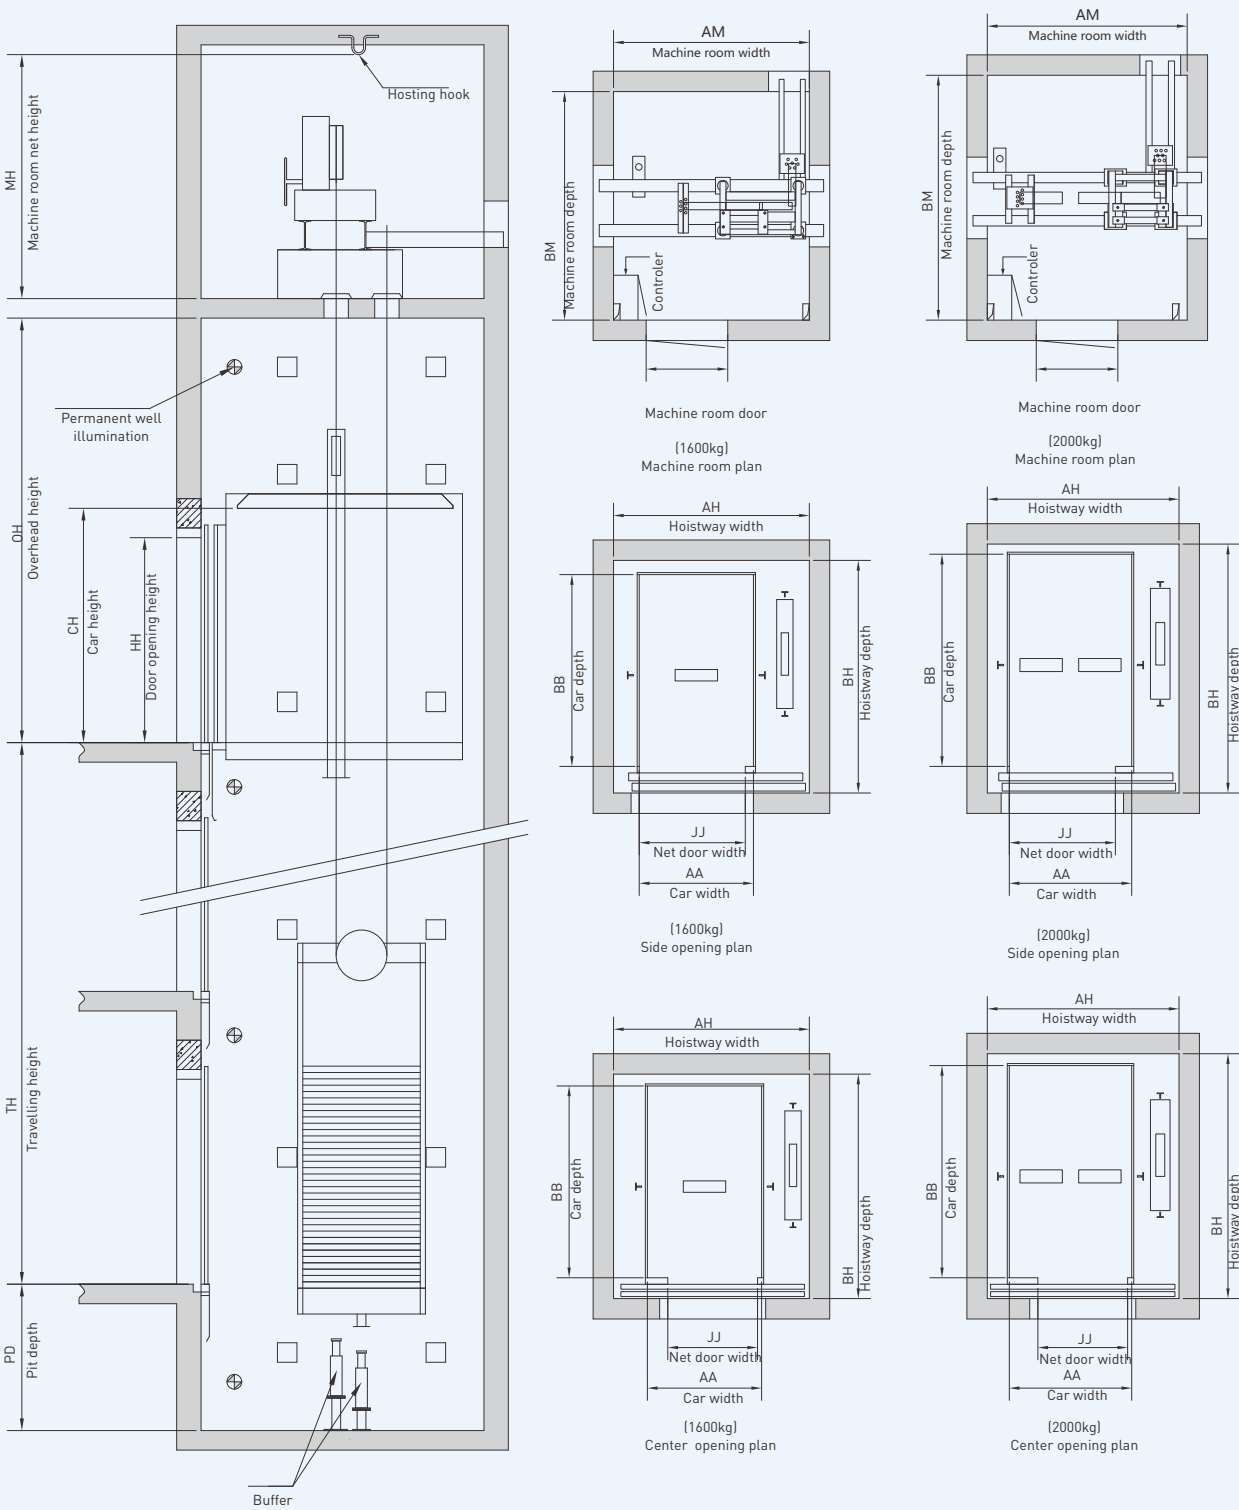


(Kg)	(m/s)	(mm)	(mm)	(mm) Car size			(mm) Hoistway size		(mm) Machine room		(mm)	(mm)	(mtr)
Loading capacity	Rated speed	Door opening width	Door opening height	Width	Depth	Height	Width	Depth	Width	Depth	Height	Depth	Max.travelling height
1600	1.0	1300	2100	1400	2400	2400	2400	2900	2400	2900	4100	1450	60
	1.6	1300	2100	1400	2400	2400	2400	2900	2400	2900	4250	1550	80
	1.75	1300	2100	1400	2400	2400	2400	2900	2400	2900	4300	1600	105
	2.0	1300	2100	1400	2400	2400	2400	2900	2400	2900	4400	1700	120
1600	1.0	1300	2100	1400	2400	2400	2400	3050	2400	3050	4100	1450	60
	1.6	1300	2100	1400	2400	2400	2400	3050	2400	3050	4250	1550	80
	1.75	1300	2100	1400	2400	2400	2400	3050	2400	3050	4300	1600	105
	2.0	1300	2100	1400	2400	2400	2400	3050	2400	3050	4400	1700	120
1600	1.0	1300	2100	1400	2400	2400	2400	2800	2400	2800	4100	1450	60
	1.6	1300	2100	1400	2400	2400	2400	2800	2400	2800	4250	1550	80
	1.75	1300	2100	1400	2400	2400	2400	2800	2400	2800	4300	1600	105
	2.0	1300	2100	1400	2400	2400	2400	2800	2400	2800	4400	1700	120
1600	1.0	1300	2100	1400	2400	2400	2400	2910	2400	2910	4100	1450	60
	1.6	1300	2100	1400	2400	2400	2400	2910	2400	2910	4250	1550	80
	1.75	1300	2100	1400	2400	2400	2400	2910	2400	2910	4300	1600	105
	2.0	1300	2100	1400	2400	2400	2400	2910	2400	2910	4400	1700	120
2000	1.0	1300	2100	1500	2700	2400	2350	3150	2450	3150	4350	1550	60
	1.6	1300	2100	1500	2700	2400	2350	3150	2450	3150	4500	1600	80
	1.75	1300	2100	1500	2700	2400	2350	3150	2450	3150	4550	1650	105
	2.0	1300	2100	1500	2700	2400	2350	3150	2450	3150	4650	1700	120
2000	1.0	1300	2100	1500	2700	2400	2350	3350	2450	3350	4350	1550	60
	1.6	1300	2100	1500	2700	2400	2350	3350	2450	3350	4500	1600	80
	1.75	1300	2100	1500	2700	2400	2350	3350	2450	3350	4550	1650	105
	2.0	1300	2100	1500	2700	2400	2350	3350	2450	3350	4650	1700	120
2000	1.0	1300	2100	1500	2700	2400	2350	3100	2450	3100	4350	1550	60
	1.6	1300	2100	1500	2700	2400	2350	3100	2450	3100	4500	1600	80
	1.75	1300	2100	1500	2700	2400	2350	3100	2450	3100	4550	1650	105
	2.0	1300	2100	1500	2700	2400	2350	3100	2450	3100	4650	1700	120
2000	1.0	1300	2100	1500	2700	2400	2350	3210	2450	3210	4350	1550	60
	1.6	1300	2100	1500	2700	2400	2350	3210	2450	3210	4500	1600	80
	1.75	1300	2100	1500	2700	2400	2350	3210	2450	3210	4550	1650	105
	2.0	1300	2100	1500	2700	2400	2350	3210	2450	3210	4650	1700	120

Note: All dimensions are in millimeters (mm).

Hospital Elevator (Machine Roomless)

Standard: Q/KJ I-10016-2022

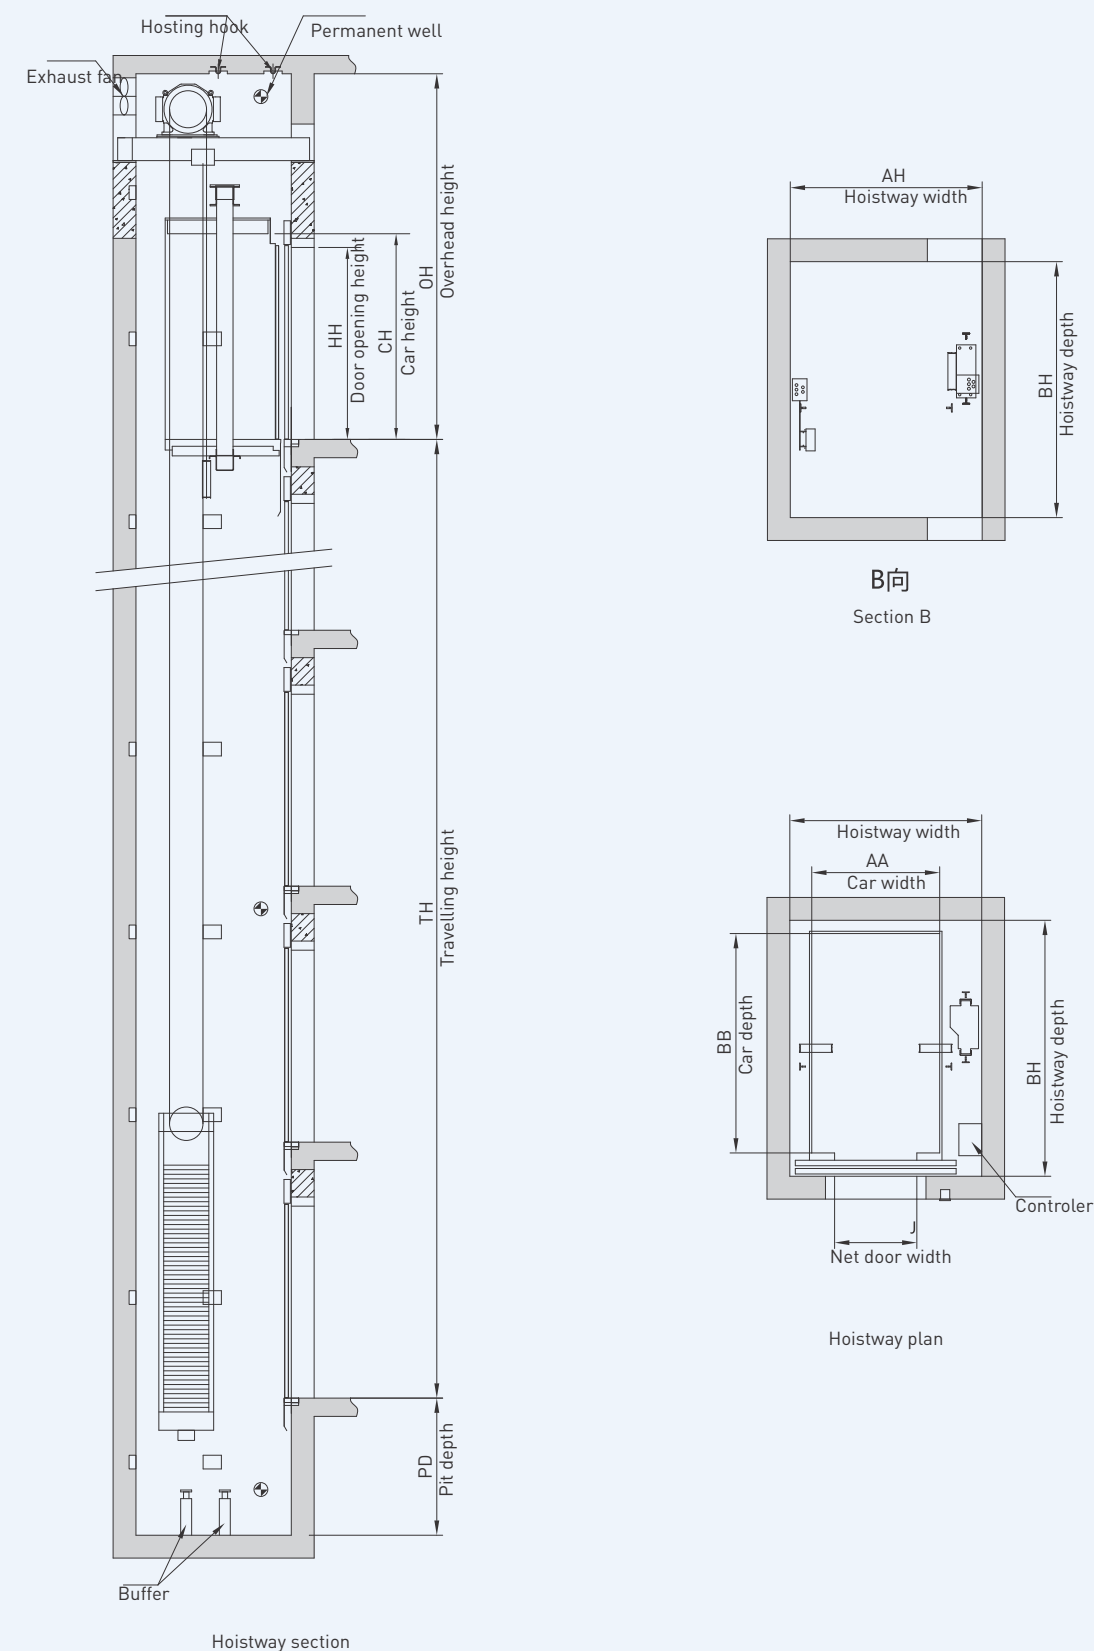

(Kg)	(m/s)	(mm)	(mm)	(mm) Car size			(mm) Hoistway size		(mm)	(mm)	(mtr)
Loading capacity	Rated speed	Door opening width	Door opening height	Width			Width		Top floor height	Pit depth	Max.travelling height
1600	1.0	1300	2100	1400	2400	2250	2400	2900	4150/4200	1450	30/50
	1.6	1300	2100	1400	2400	2250	2400	2900	4300/4350	1550	30/60
	1.75	1300	2100	1400	2400	2250	2400	2900	4350/4400	1600	30/80
	2.0	1300	2100	1400	2400	2250	2400	2900	4750	1700	95
1600	1.0	1300	2100	1400	2400	2250	2400	3050	4150/4200	1450	30/50
	1.6	1300	2100	1400	2400	2250	2400	3050	4300/4350	1550	30/60
	1.75	1300	2100	1400	2400	2250	2400	3050	4350/4400	1600	30/80
	2.0	1300	2100	1400	2400	2250	2400	3050	4750	1700	95
1600	1.0	1300	2100	1400	2400	2250	2450	2800	4150/4200	1450	30/50
	1.6	1300	2100	1400	2400	2250	2450	2800	4300/4350	1550	30/60
	1.75	1300	2100	1400	2400	2250	2450	2800	4350/4400	1600	30/80
	2.0	1300	2100	1400	2400	2250	2450	2800	4750	1700	95
1600	1.0	1300	2100	1400	2400	2250	2450	2910	4150/4200	1450	30/50
	1.6	1300	2100	1400	2400	2250	2450	2910	4300/4350	1550	30/60
	1.75	1300	2100	1400	2400	2250	2450	2910	4350/4400	1600	30/80
	2.0	1300	2100	1400	2400	2250	2450	2910	4750	1700	95
2000	1.0	1300	2100	1500	2700	2250	2450	3200	4150/4200	1450	30/50
	1.6	1300	2100	1500	2700	2250	2450	3200	4300/4350	1550	30/60
	1.75	1300	2100	1500	2700	2250	2450	3200	4350/4400	1600	30/80
	2.0	1300	2100	1500	2700	2250	2450	3200	4750	1700	95
2000	1.0	1300	2100	1500	2700	2250	2450	3350	4150/4200	1450	30/50
	1.6	1300	2100	1500	2700	2250	2450	3350	4300/4350	1550	30/60
	1.75	1300	2100	1500	2700	2250	2450	3350	4350/4400	1600	30/80
	2.0	1300	2100	1500	2700	2250	2450	3350	4750	1700	95
2000	1.0	1300	2100	1500	2700	2250	2450	3100	4150/4200	1450	30/50
	1.6	1300	2100	1500	2700	2250	2450	3100	4300/4350	1550	30/60
	1.75	1300	2100	1500	2700	2250	2450	3100	4350/4400	1600	30/80
	2.0	1300	2100	1500	2700	2250	2450	3100	4750	1700	95
2000	1.0	1300	2100	1500	2700	2250	2450	3210	4150/4200	1450	30/50
	1.6	1300	2100	1500	2700	2250	2450	3210	4300/4350	1550	30/60
	1.75	1300	2100	1500	2700	2250	2450	3210	4350/4400	1600	30/80
	2.0	1300	2100	1500	2700	2250	2450	3210	4750	1700	95

Note: All dimensions are in millimeters (mm).

Standard Functional Feature

Brake detection protection	Brake arm detection switch executes real-time monitor to brake opening / closing. If the brake does not open by the requirements, the system will not start the elevator.
Protection of none door opening outside door zone	Automatic door opening is forbidden under none door zone condition.
Low-speed protection	It prevents elevator from low-speed running outside the control range causing any safety problem(s).
Prompt of overload alarm	Before the elevator shuts the door, if it detects overload signal, the elevator doors keep opening and overload buzzer rings and overload light is on. After it removes overload problem, it re-starts automatically.
Automatic parking in trouble	When the elevator stops in none leveling zone due to any trouble, if it is not caused by safety device action, it executes self-rescue running towards the middle floor direction at low speed. It parks and opens the door at the nearest service floor to prevent from any trapping accident.
Overspeed protection	With the star-delta brake function, the elevator system can limit the speed well even in case of forced brake releasing.
Unintended car movement protection (UCMP)	When the landing door isn't locked and the car door isn't closed, the elevator is equipped with a device which can stop unintended movements of the car leaving the landing caused by any failed part of the traction machine or drive control system for the safe operation of the car.
Checking the short circuit of door locks	It will check whether the landing door lock or car door lock has a short circuit every time when the elevator stops at a landing and opens the door. If any, the elevator will report the failure and stop until the failure is removed.
Fire-fighting return	When the fire-fighting switch closes, the system enters into fire-fighting return. The system will remove all the landing calls and car command signals, and it automatically returns to fire-fighting home landing, and the door keeps open. If the elevator is operating in reverse direction, it will stop at the nearest storey but won't open the door, then back to fire station and no longer running, the door will keep opening.
Home landing elevator locking	When the elevator is under automatic condition, when it shuts home landing locking switch, the elevator will complete all the registered car command services, automatically return to home landing, it enters into parking condition. As soon as locking switch is on, it immediately returns from parking condition and goes into normal running.
Cancellation of the error register	If the passenger presses the car command button at certain floor and has registered it by mistake, (by then the car indicating lamp is bright), if under the condition of none elevator running, the passenger only double-click the car command button at the same floor to cancel the register. (By then the car indicating lamp out.)
Automatic correction of floor signal	If the floor display position has error, after the system detects terminal switch in the travel, it will automatically correct the floor display.
Cancellation of the reverse command(s) in the car	When the elevator travels to the farthest floor and changes the speed, it removes all the car command register.
Self-diagnostic embedded call button	If on certain storey, the call button was pressed over certain time but not disconnected, the system assumes that it is embedded button. It does not register the landing call of the same floor afterwards. Responsive lamp which corresponds to the button keeps flickering for alarming. When the button disconnects, it exits from above condition.
Re-leveling function	If the elevator parks on the current floor, when too many passengers enter into / leave the elevator, the car is separated from the leveling zone because of wire rope extension or shortening. The elevator will then travel to the leveling position at low speed under the condition of door-opening.

Healthy Elevator Ride (Optional)

Car UV Disinfection




After the elevator has been unused for a certain period of time, it communicates and controls with the elevator to automatically light up the ultraviolet lamp for disinfection and sterilization. Ultraviolet rays can disinfect and sterilize various common pathogenic bacteria, with a sterilization rate of more than 99%, providing passengers with a safe and clean elevator environment.





Negative Ion Fresh Air System



Automatically releasing negative ions, adsorbing small dust particles, oxidizing foreign objects in the air, purifying the air, and caring for human health.

Car Air Purifier



Automatic dust removal and sterilization, clean and pollution-free, keeping the air inside the elevator car clean and hygienic at all times. The automatic operation time can be set, which is energy-saving and environmentally friendly.





📍 Cité Mourtada 2 Sipres Bande,
verte lot 104, VDN, Dakar 25000,
Senegal, West Africa.

✉ marketing@grvertiq.com

🌐 www.grvertiq.com

☎ +221 711 200 277